ELEVATE
UNIFIED COMMUNICATIONS

IP PHONE QUICK START GUIDE SERIES

YOUR GUIDE FOR:

Yealink T46G

CloudBusinessPhone.com

Quick Start Guide

Elevate Unified Communications

Yealink T46G



ELEVATE

UNIFIED COMMUNICATIONS


Welcome to Elevate Unified Communications.

What's in the box?


Yealink T46G

A. Phone
B. Ethernet Cable
C. Handset Cable
D. Handset
E. Stand
F. Quick Start Guide
G. Power Adapter


A.

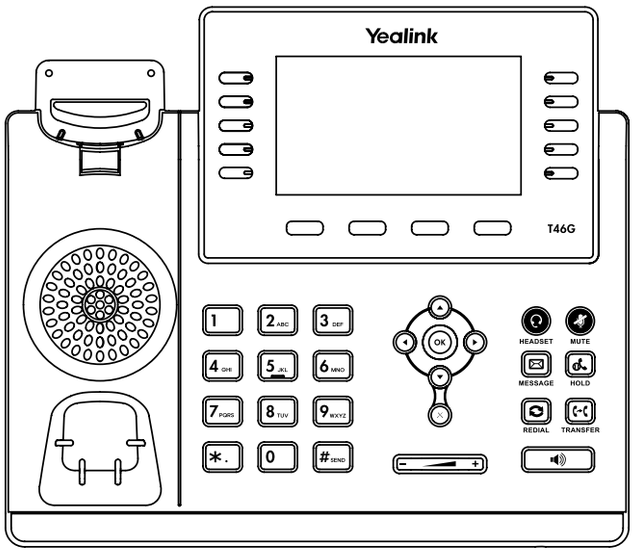


B.

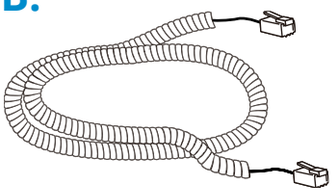


C.

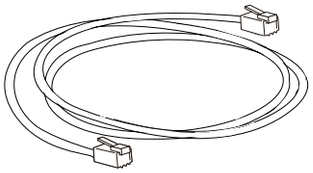


D.

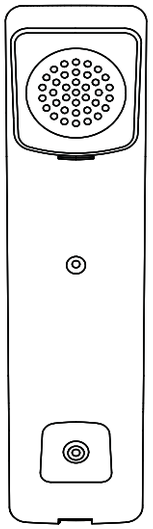


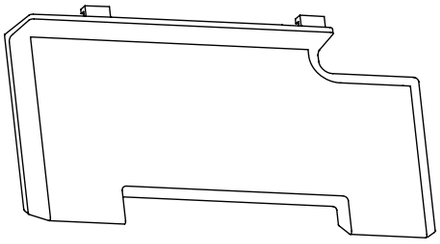

E.

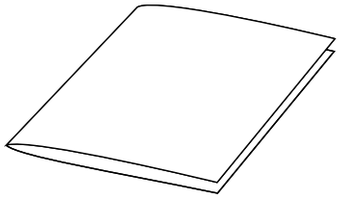

F.

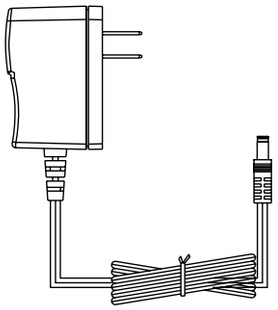


G.

Guided Setup


Attach Stand

Attach the stand as shown below.

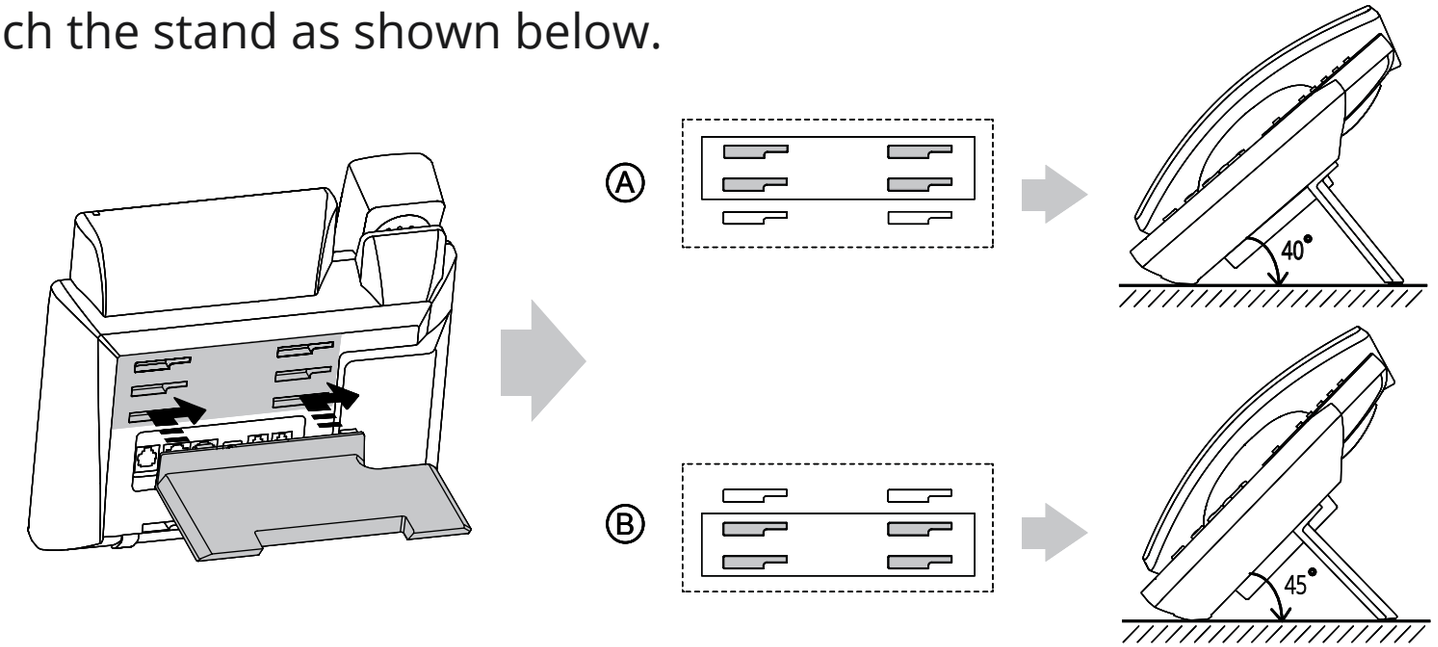


Connect Handset and Optional Headset

Note: Your phone supports wired headsets, including electronic hookswitch (EHS) headsets. For connection directions, refer to your headset documentation.

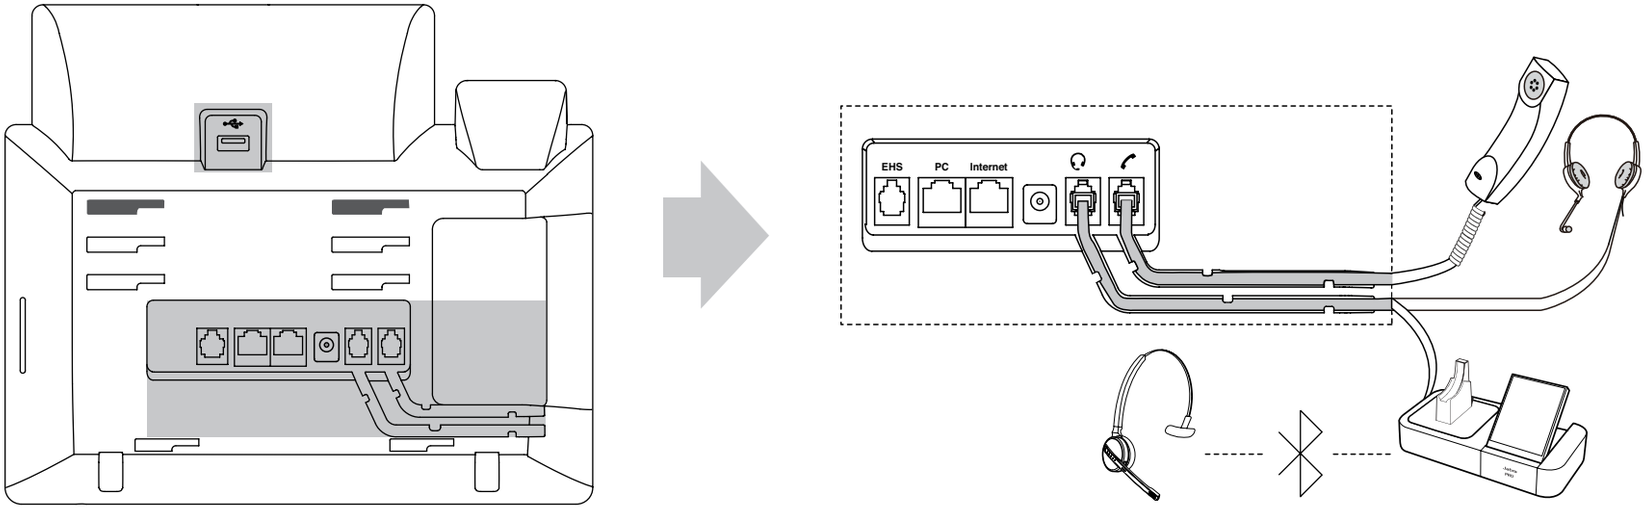

Connect Cables


Please follow the diagram to install your phone. Once plugged in, the phone will automatically download its configuration and start to work. The voicemail box will be functional with a default greeting.

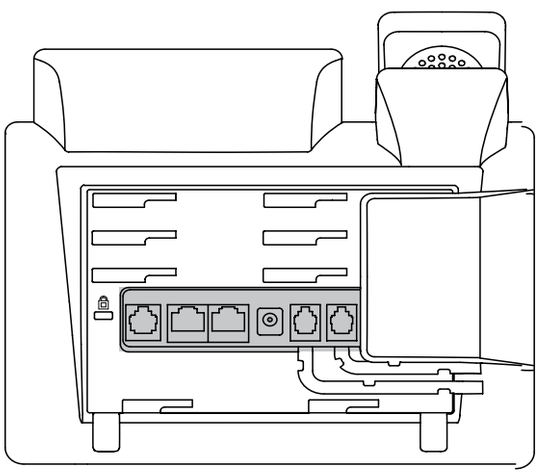

Ⓐ


AC Power Option

PC Connection (Optional)

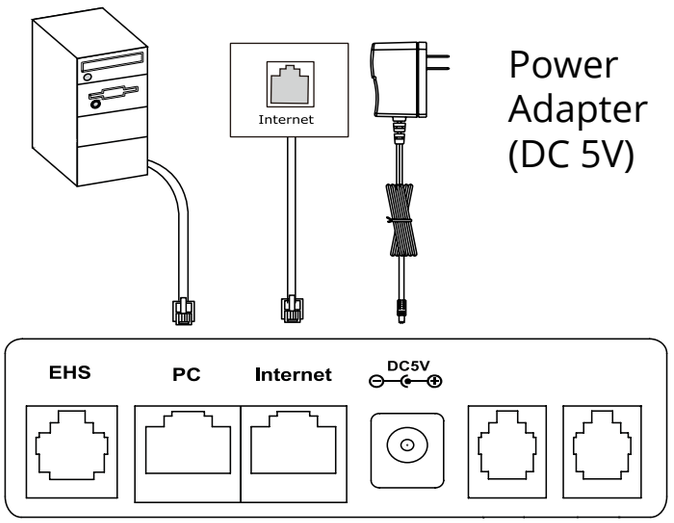

Ⓑ

PoE (Power over Ethernet) Option

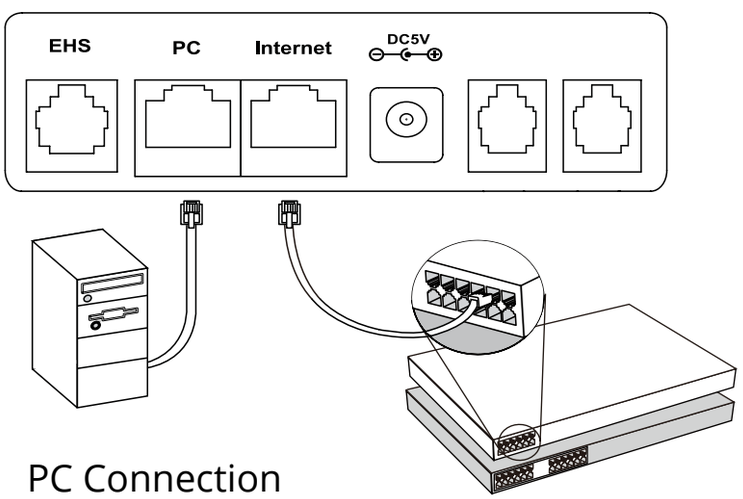

PC Connection (Optional)

IEEE 802.3af compliant PoE Hub/Switch

Voicemail Box Setup

RECORDING YOUR PERSONAL VOICEMAIL GREETING

1. Press the “Messages” ✉ button.
2. Enter the PIN provided to you by your Administrator, followed by the # key.
3. Select option 3 for personal options.
4. Select option 1 to record your voicemail greeting.
5. Follow the voice prompts to record and check your greeting.

CHANGING THE PIN FROM THE PHONE

1. Press the “Messages” ✉ button.
2. Enter the PIN provided to you by your Administrator, followed by the # key.
3. Select option 3 for personal options.
4. Select option 2 to change your PIN.
5. Enter the new PIN when prompted. Press # when done.




HD
Yealink
Jun.1 WED 11:24:55
Amanda
Brian
Cris
Dawson
Frank
History
Directory
DND
Menu
T46G
OK
HEADSET
MUTE
MESSAGE
HOLD
REDIAL
TRANSFER

Commonly Used Features

PLACING OUTGOING CALLS

When the phone is not in use:

1. Pick up the handset or press the “Speakerphone”  button.
2. Dial tone will be heard.

When using a headset:

3. Press the “Headset”  button to activate headset mode.
4. Dial an extension or telephone number.

When you are already on a call:

1. Press the “Hold” soft key.
2. Press the “NewCall” soft key.
3. Dial an extension or telephone number.
4. Resume the original call by pressing the “Swap” soft key.

ANSWERING AN INCOMING CALL

On the Handset:

- Pick up the handset to answer the call.

On a Headset:

- When a headset is connected, press the “Headset”  button to answer the call.

On Speakerphone:

- Press the “Speaker”  button to answer the call.

REJECTING AN INCOMING CALL

Press the “Reject” soft key to immediately send the caller to voicemail.

IGNORING AN INCOMING CALL

Press the “Silence” soft key to ignore the incoming phone call.
Note: The caller will continue to hear ringing for the specified amount of time, defined in the phone’s “No Answer Forwarding” settings.

ENDING A CALL

On a Handset:

- Hang up the handset or press the “More” soft key followed by the “EndCall” soft key.

On a Headset:

- Press the “EndCall” soft key.

On Speakerphone:

- Press the “Speakerphone” button.

HOLD

Placing a Call On Hold:

- While on a call, press the “Hold” soft key.

Retrieving Calls On Hold:

- Press the “Resume” soft key.

TRANSFERRING CALLS

Blind Transfers:

1. While on a call, press the “Transfer” soft key.
2. Dial the desired phone number or extension number.
3. Press the “Transfer” soft key again.
4. The call is automatically transferred.

Attended (Consultative or Warm) Transfers:

1. While on a call, press the “Transfer” soft key.
2. Dial the desired phone number or extension number.
3. Wait for the party to answer to announce that you are transferring a call to them.
4. Press the “Transfer” soft key to transfer the call.

MUTE

1. To mute the microphone on an active call, press the “Mute” button.
2. To un-mute the microphone, press the “Mute” button again.

VOICEMAIL

1. Press the “Message”  button.
2. Enter your PIN when prompted.

VOLUME ADJUSTMENT

In-Call Volume:

- While on a call, press the “+” and “-“ buttons to raise or lower the volume.

Ringer Volume:

- While the phone is not in use, press the “+” or “-“ buttons to adjust the ringer volume on the phone.

CALL WAITING

While already on a call, and a new call rings in, you will hear a beep tone emitted by your phone.

To Answer the Second Call:

1. Press the “Answer” soft key to access that call. The first call will be placed on hold.”
2. Once the second call has ended, resume the original call by pressing the “Resume” soft key.

To Reject the Second Call:

- Press the “Reject” soft key to immediately send the caller to voicemail.

SPEAKERPHONE

While the phone is not in use:

- Press the “Speakerphone”  button to activate the speakerphone and get dial tone for an outbound call.

While on a call on the handset or headset:

- Press the “Speakerphone”  button to continue the current call on the speakerphone.

While a call on speakerphone is active:

- Press the “Speakerphone”  button to hang up the current call.

FORWARDING CALLS


1. Press the “Menu” soft key.
2. Press the right arrow key to highlight “Features” and press the “Ok” button.
3. Press the “Ok” button while highlighting “Call Forward”.
4. Press the “Ok” button or the “Enter” soft key.
5. If “Always Forward” is currently disabled, “Always Forward: Off” will be displayed.
6. Press the “Ok” button, followed by the left or right ”Arrow” button to enable always forwarding. Next press the down “Arrow” button and enter a phone number, then press the “Save” soft key.
7. Enter a valid telephone number or extension.
8. Press the “Ok” button or the “Save” soft key.


Disabling “Always Forward”:

1. If “Always Forward” is currently enabled, “Always Forward: On” will be displayed.
2. Press the “Ok” button or the “Enter” soft key.
3. Use the left or right “Arrow” button to disable always forwarding.
4. Press the “Ok” button or the “Save” soft key.

“Busy Forward” and “No Answer Forward” can be set in a similar manner.

DESKTOP AND MOBILE APPS

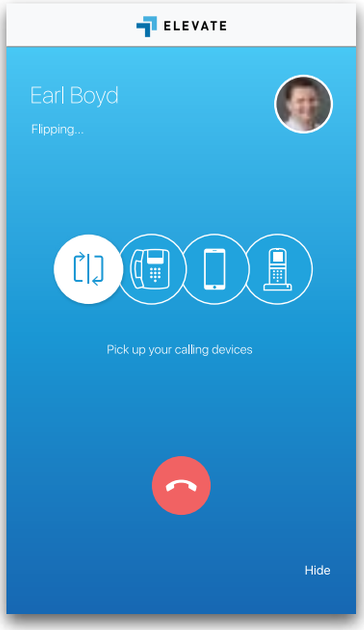

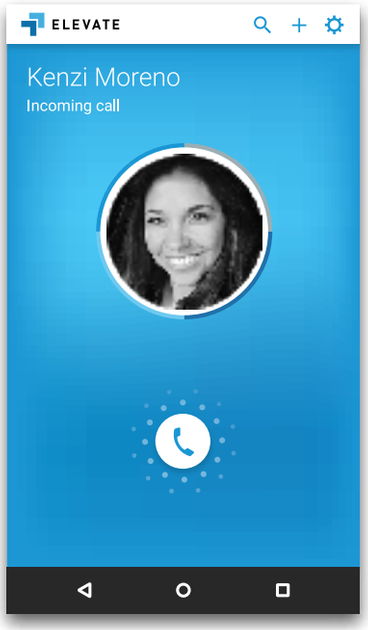

Seamlessly extend the features of your Elevate service to your desktop and your Android or iOS mobile device for free. Receive your calls, manage your voicemail, and update settings and more.

Visit www.serverdata.net/elevateapps to learn more.

We are here to help.



http://controlpanel.msoutlookonline.net/support/kb/

UN-YealinkT46G-PLR-QS-001

©2017 Voice Telco Services
121334_PLR_HPBX_Guide_T46G_V1_121317